

---


# LinTronic

Controlling Para Lights

# Customize your commands in the Configurators CommandList

The information (commands) controlling the TT455-RT-238 to send out RS232 commands, consist of 8 pcs. 3-digit numbers. These commands can be created in the CommandList section of the TT455-RT-238's Configurator.

Structure:

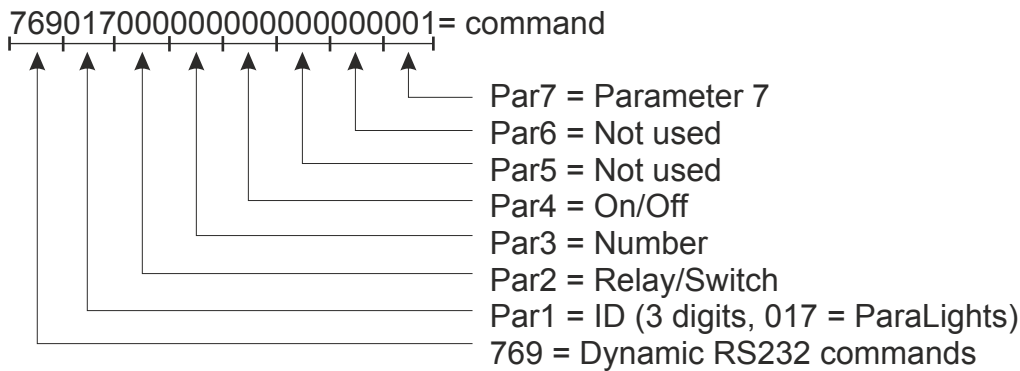

You create commands for your own personal use.  
The commands you create are stored onto your computer for later use/modification.  
The commands cannot be uploaded to our web-database.

76901600000000000000000001= command  
Parameter 2 = TYPE, RANGE: 001 - 002

76901600000000000000000001= command  
Parameter 3 = Parameter 1 (TYPE 1 and TYPE 2)

76901600000000000000000001= command  
Parameter 4 = Parameter 2 (TYPE 2)

76901600000000000000000001= command  
Parameter 5 = Not used

76901600000000000000000001= command  
Parameter 6 = Not used

## **PARA LIGHTS: TYPE 1**

6 BYTES

BYTE 3 = RANGE: 001 - 060

BYTE 6 = CHECKSUM

BYTE					CHKSUM
1	2	3	4	5	6

## **PARA LIGHTS: TYPE 2**

6 BYTES

BYTE 3 = RANGE: 001 - 016

BYTE 4 = RANGE: 001 - 060

BYTE 6 = CHECKSUM

BYTE					CHKSUM
1	2	3	4	5	6