



# LinTronic

## BT-RS232

### Bootload new firmware



# BT-RS232 BootLoader

Install the BootLoader from this website:

<http://www.bok-teknik.dk/bt-rs232.htm>

The Configurator will inform you which comport to use.

Click "Start Boot" and watch the BT-RS232 receive a firmware update.

Close the BootLoader and re-open the Configurator when update is finished.

