

LINTRONIC

Volume control

Your original remote is designed to send codes in a continuous stream, and your device is expecting the codes to arrive with a specific timing:



 
The TT455-RT-238 is designed to detect a code, then convert it and transmit the result:



The TT455-RT-238 will still do this, even if you activate and hold the B&O remote, which will cause your device to receive two codes at the same time - the B&O code and the converted code. Most devices will be disturbed by the two different codes arriving at the same time.



You get the best result by tapping the volume button of the BEO remote and adjust the repeat number of the device's volume command, giving a longer up/down adjustment.



Change the repeatnumber in the Configurstor | CommandList and test.
Typically a repeatnumber of 003 - 009 should be used.