

BOSE LIFESTYLE 18/28 SERIES II



Introduction

This manual describes how to control a BOSE LIFESTYLE 18/28 system, by means of a Bang&Olufsen BEO4 remote control.

The system is designed for owners of a Bang&Olufsen Television, whom wants to use the existing BEO4 to remote control a BOSE LIFESTYLE 18/28.

An infrared converter, LinTronic TT455-RT-238 (with BOSE feature enabled) or TT455-RT-003 (dedicated BOSE controller), receives the infrared signals from the BEO4, converts them into an appropriate BOSE infrared signal, and sends it to the BOSE system.

It is assumed that the user owns:

- a BOSE LIFESTYLE 18/28 SERIES II system.
- a Bang&Olufsen Television (optional)
- a BEO4 remote control



Preparations

The LinTronic TT455-RT-238/TT455-RT-003 must be powered by 9 - 18 Volt dc, by an adaptor capable of delivering 350 mA or higher, and must be located so it can receive the BEO4 signals and reach the BOSE system when transmitting.

The BOSE system must be programmed to receive IR signals. Use the original BOSE remote control to change the following:

Activate the BOSE remote control, key SYSTEM and watch the SYSTEM MENU appear on the TV screen. Goto REMOTE CONTROL and set IR CONTROL to ON (do not select LEARN).



Operation

The BOSE system can be controlled by the BEO4 in the following modes:
TV, RADIO, SAT/DTV, DVD, CD, VTAPE/VMEM, ATAPE/AMEM

In order to change mode on the BOSE system:

For TV mode, activate BEO4 TV

For RADIO mode, activate BEO4 RADIO

For CAB-SAT mode, activate BEO4 SAT or DTV

For DVD mode, activate BEO4 DVD

For CD mode, activate BEO4 CD

For VCR mode, activate BEO4 VTAPE or VMEM

For HARDDISK mode (STORED), activate BEO4 ATAPE or AMEM

In order to control the most BOSE features, we had to work around a few obstacles.

Menu/Settings

In any mode, in order to get access to the BOSE menu, activate the "YELLOW" button which brings up the BOSE menu on the TV. Also it allows you to use all four directions key on the BEO4 to navigate in the BOSE menu. The GO button will act as ENTER. Activate "EXIT" to skip the menu. This will bring the direction keys back the normal operation.

DVD menu

In DVD mode, in order to get access to the DVD menu, activate the "RED" button which brings up the DVD menu on the TV. Also it allows you to use all four directions key on the BEO4 to navigate in the DVD menu. The GO button will act as ENTER.

Activate "EXIT" to skip the menu. This will bring the direction keys back the normal operation.

Speakers 2-3-5

In any mode, in order to adjust the surround load-speaker sound level, activate the "BLUE" button. Adjust sound level by "<<" and ">>".

Activate "EXIT" to skip Speaker 2-3-5 mode.

Shuffle

Activate "RANDOM - GO" in any mode.

Repeat

Activate "REPEAT - GO" in any mode.

Pause

Activate "STOP" in any mode.

Stop

Activate "STOP - STOP" in any mode.

The following BOSE features cannot be controlled from the BEO4:

MUTE ALL

GUIDE

0 - 9 and Standby keep the same functionality in any mode.



In order not to conflict with features of the Bang&Olufsen Television, some of the BEO4 buttons change functionality depending on the mode in which they are operated.

TV

Volume Down	<<
Volume Up	>>
Play	GO

RADIO

Scan backward	<<
Scan forward	>>
Next station	Up
Previous station	Down

DVD

Volume Down	<<
Volume Up	>>
Up	Up
Down	Down
Play	GO

DVD – RED (DVD MENU)

Left	<<
Right	>>
Up	Up
Down	Down
Enter	GO

CD

Rewind	<<
Fast forward	>>
Next number	Up
Previous number	Down
Play	GO
Pause	STOP
Stop	STOP – STOP

VTAPE / VMEM


Volume Down	<<
Volume Up	>>

HARDDISK - ATAPE / AMEM


Open Library	Menu
Close Library	Exit
Left	<<
Right	>>
Up	Up
Down	Down
Enter	GO

YELLOW (BOSE MENU)

Arrow left	<<
Arrow right	>>
Arrow up	Up
Arrow down	Down
Enter	GO

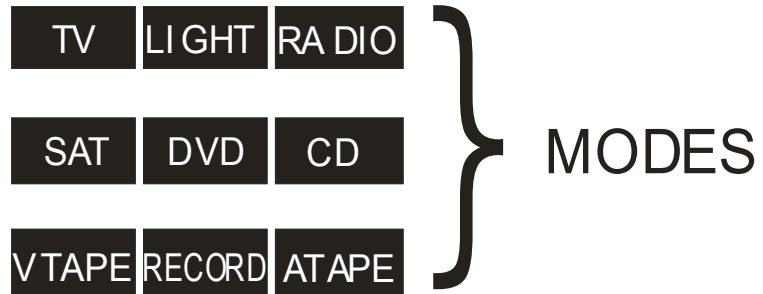

DVD MENU

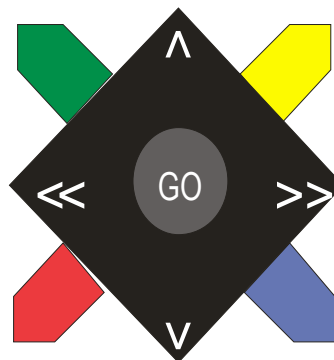

MODE SETTINGS

SPEAKER

