

BOSE LIFESTYLE 28/35



Introduction

This manual describes how to control a BOSE LIFESTYLE 28/35 system, by means of a Bang&Olufsen BEO4 remote control.

The system is designed for owners of a Bang&Olufsen Television, whom wants to use the existing BEO4 to remote control a BOSE LIFESTYLE 28/35.

An infrared converter, LinTronic TT455-RT-003, receives the infrared signals from the BEO4, converts them into an appropriate BOSE infrared signal, and sends it to the BOSE system.

It is assumed that the user owns:

- a BOSE LIFESTYLE 28/35 system.
- a Bang&Olufsen Television
- a BEO4 remote control

Preparations

The BOSE system must be programmed to receive IR signals. Use the original BOSE remote control to change this setting.

The LinTronic TT455-RT-003 must be powered by 9 - 18 Volt ac or dc, by an adaptor capable of delivering 500 mA or higher.

The LinTronic TT455-RT-003 must be located so it can receive the BEO4 signals and reach the BOSE system when transmitting.



Operation

The BOSE system can be controlled by the BEO4 in the following modes:
TV, RADIO, SAT, DVD, CD, VTAPE, ATAPE

The BEO4 is operated in the most logical way we could think of. In order to change mode on the BOSE system:

- For TV mode, activate BEO4 TV
- For RADIO mode, activate BEO4 RADIO
- For AUX mode, activate BEO4 SAT
- For DVD mode, activate BEO4 DVD
- For CD mode, activate BEO4 CD
- For VCR mode, activate BEO4 VTAPE
- For TAPE mode, activate BEO4 ATAPE

In order to control the most BOSE features, we had to work around a few obstacles.

Menu/Settings

In any mode, in order to get access to the BOSE menu, activate the "YELLOW" button which brings up the BOSE menu on the TV. Also it allows you to use all four directions key on the BEO4 to navigate in the BOSE menu. The GO button will act as ENTER. Activating the "YELLOW" button repeatedly will turn the BOSE menu On/Off but will then the directions keys will keep working allowing you to control for example the menu of a DVD.

Activate "EXIT" repeatedly until the BOSE menu disappears from the screen. This will bring the direction keys back the normal operation.

Speakers 2-3-5

In any mode, in order to adjust the surround load-speaker sound level, activate the "BLUE" button. Adjust sound level by "<<" and ">>".
Activate "EXIT" to skip Speaker 2-3-5 mode.

Shuffle

Activate "RANDOM - GO" in any mode.

Repeat

Activate "REPEAT - GO" in any mode.

Pause

Activate "STOP" in any mode.

Stop

Activate "STOP - STOP" in any mode.

The following BOSE features cannot be controlled from the BEO4:

MUTE ALL
GUIDE

0 - 9 and Standby keep the same functionality in any mode.



In order not to conflict with features of the Bang&Olufsen Television, some of the BEO4 buttons change functionality depending on the mode in which they are operated.

TV

Volume Down	<<
Volume Up	>>
Play	GO

RADIO

Scan backward	<<
Scan forward	>>
Next station	Up
Previous station	Down

DVD

Volume Down	<<
Volume Up	>>
Up	Up
Down	Down
Play	GO

BOSE or DVD MENU

Arrow left	<<
Arrow right	>>
Arrow up	Up
Arrow down	Down
Enter	GO

CD

Rewind	<<
Fast forward	>>
Next number	Up
Previous number	Down
Play	GO
Pause	STOP
Stop	STOP – STOP

VTAPE

Volume Down	<<
Volume Up	>>